



KEYBOARD

- | | |
|----------------------------------|---|
| ① LED BULBS | ⑫ RECORD / REPLAY KEY |
| ② SPEAKER | ⑬ 8 RHYTHMS |
| ③ ON / OFF SWITCH W/RED LED BULB | ⑭ BLACK & WHITE 37 KEYS
(White 22 keys with red LED bulbs) |
| ④ BATTERY COMPARTMENT (at rear) | ⑮ TEMPO CONTROL |
| ⑤ 8 INSTRUMENTS | ⑯ DEMO SELECT BUTTON |
| ⑥ 8 INSTRUMENT SWITCH | ⑰ BEAT MODE |
| ⑦ STOP BUTTON | ⑱ 3 DRUMS |
| ⑧ LESSON | ⑲ WHITE 22KEYS LIGHTUP |
| ⑨ ONE KEY ONE NOTE | ⑳ VOLUME CONTROL |
| ⑩ CHORD ON / OFF | ㉑ BOOK STAND |
| ⑪ RED LED BULB | |

INSTALLING BATTERIES

INSTALL BATTERIES AS SHOWN
USES 4 "AA" BATTERIES (INCLUDED)

* For the keyboard's best performance and longest life, we recommend same type of New Alkaline Batteries *

Notes : WATCH CAREFULLY THE ⊕ AND ⊖ ENDS OF BATTERIES.

IF YOU DON'T INSTALL BATTERIES CORRECTLY THE KEYBOARD WILL NOT WORK.

REMOVE BATTERIES IF UNIT IS NOT TO BE USED FOR A LONG PERIOD OF TIME (ABOUT 30 DAYS OR MORE)
TO PREVENT BATTERY LEAKAGE AND POSSIBLE DAMAGE TO THE UNIT.

Follow these steps to install batteries.

1. Set "PLAY" mode at rear and ON/OFF (on the front of the keyboard) to the "OFF" position.
2. Use a screwdriver to loosen the screw on the battery compartment cover.
3. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) as marked inside.
4. Close the cover, then tighten the screw.
5. When the volume weakens or the keyboard stops operating properly, replace the batteries.

CAUTIONS :

- * If you do not plan to use the 37-keys keyboard for 4 or more weeks, remove the batteries.
- * Dispose of old batteries promptly and properly. Do not burn or bury them.

PRECAUTION :

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-zinc), or rechargeable (Nickel-cadmium) batteries.
- Do not use rechargeable batteries.

WARNING:
CONTAINS THE GLASS LIGHT
BULB WHICH COULD CAUSE AN
INJURY IF THE TOY IS BROKEN !

OPERATION

1. LED Bulbs : Sounds are lighting system with changeable running flash-lights.
2. Speaker : Left and right speakers.
3. On / Off : On/Off switch (Auto sleep function : The Keyboard shut-off automatically. If you do not press any key for about 38 seconds. Please press any key to restart.) When power switch On, the keyboard is default setting & LED light up.
4. Batteries Compartment : See install batteries as shown as above.
5. 8 Instruments : Press once to choose from the 8 percussion instruments sound key available. You can create your own melodies on the keyboards. Just the black and white keys. (Press white keys with light-up) The keyboard automatically selects the piano sound each time you turn it on. To select a different instrument sound, press the desired sound's button. (Piano, Trumpet, Guitar, Violin, Saxophone, Bell, Flute and Bass.)
 - * 8 Instruments + 3 Drums : Press once to choose from the 8 instruments sound key available. You can create your own melodies on the keyboard. Just play the black and white keys (Press white keys with light-up) and add any 3 drums sound in your melodies.
6. Instruments Switch : Press once to choose the 8 percussion instruments sound key available, You can create your own melodies on the keyboard. Just play the black & white keys. (Press white keys with light-up)
7. Stop : Exit any mode by pressing the Stop key.
8. Lesson : Press lesson once to choose first demo song, press again to choose the next song. Meanwhile, the background music start demo sound continuously play the indicated light-up white keys unit the end of playing and with the lighting system changeable running flash-lights on 2 speakers. Press Stop key to turn off this function.
 - * Lesson + Tempo + Key Light : Press lesson once demo song + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
9. OKON : Press OKON once to choose first demo song, press again to choose the next song. Meanwhile, the background music start demo sound continuously play the indicated light-up white keys or any black & white keys to until the end of playing and with the lighting system changeable running flash-lights on 2 speakers. Press STOP key to turn off this function.
 - * OKON + Tempo + Key Light : Press OKON have demo song + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
10. Chord : Press CHORD are melodies sound to switch the any to the 8 rhythms. Press once to switch Off single beat & press again to resume. When switch Chord is Off the lighting system changeable running flash-lights on 2 speakers, the Chord is On the lighting system changeable running flash-lights on 2 speakers and white keys. Press Stop key to turn off this function.
 - * OKON + Chord + 8 Instruments⑤or⑥ + Tempo + Key Light : Press OKON have demo song + Press Chord to choose beat + press to choose any 8 Instruments. Just playing the indicated white keys or any black & white keys unit the end of playing and with lighting system changeable running flash-light on 2 speakers + adjust the Tempo press Up to speed up or Down to slow + Press Key Light is Off/On the keyboard are 22 white keys. Press Stop key to turn off this function.
11. Red LED Bulbs : RECORD and REPLAY the LED light up signal is ON.
12. Record / Replay : — Press Record when Red LED Bulb light up and produce background music. Just play the black & white keys to create your own tune. (Press white keys with light.)
 - * Record + 8 Instruments⑤or⑥ : Press Record when red LED bulb light-up and produce background music and press any 8 inst. sound. Just play the black & white keys to create your own tune. (Press white keys with light.)
 - Press Replay to hear it your record music at about 39 keys and final Instruments sound. Press Replay again will play once each time. The Replay button is pressed until the Red LED bulb light-up. Press Stop key to turn off this function. (Press white key with light-up to record, meanwhile the replay can light up on white keys only. If press black keys to record, when replay cannot lighting on the black keys.)
13. 8 Rhythms : Press once to choose the 8 rhythm keys background music available, press again to choose different styles of best (Bossa, Reggae, Dixie Land, Bulb, Jazz, Rock, Disco & Bulb Grass) and lighting system changeable running flash-lights on 2 speakers and white keys. You can create your own melodies on the keyboard. Just play the black & white keys + Adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
 - * 8 Rhythms + 3 Drums + Tempo + Key Light : Press once to choose from the 8 rhythm keys background music available. You can create your own melodies on the keyboard. Just play the black and white keys + add any 3 drums sound in your melodies. + Adjust the Tempo press Up to speed up or Down to slow + Press Key Light is Off/On the keyboard are 22 white keys. Press Stop key to turn off this function.
14. Black & White Keys : You can create your own melodies on the keyboard. Just play the 37 black and white keys.
15. Tempo Control : You can adjust the Tempo of the background rhythm with the two Tempo Buttons. Press Up button to speed up the tempo and press Down button to slow the tempo down.
16. Demo : Press once to choose first demo song, press again to choose the next song. When start the demo song until the end of music and the lighting system changeable running flash-lights. Press Stop key to turn off this function.
 - * Demo + Tempo + Key Light : Press the demo song keys + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
17. Beat Mode : Press the key of sound and lighting system changeable running flash-lights on 2 speakers. Press Stop key to turn Off this function.
18. 3 Drums : There are 3 different styles button (Cymbal, Hihat Cymbal and High Tom) of drums. Press any drum button to hear it.
19. Sound Effect : Press the button to hear Hand Clap sound.
 - * Beat Mode + 3 Drums + Hand Clap + Tempo + 8 Instruments⑤or⑥+ Black & White Keys : Press Beat Mode of music + any 3 Drums are a few seconds sound and lighting system changeable running flash-lights on 2 speakers + Adjust the Tempo press Up to speed up or Down to slow. You can select any 8 instruments sound to create your own melodies on the keyboard. Just play the black & white keys. Press Stop key to turn off this function.
20. Key Light : Pressing the Key Light On/Off function. The 22 white keys on the keyboard with LED bulb are light.
21. Volume Control : The Volume control has several levels. The keyboard automatically selects the regular levels for each time you turn it on. To adjust the volume repeated press the Up to increase the volume and Down to decrease
22. Book Stand : Put down the book stand on the holder and put out to release.