


### KEYBOARD

- |   |                        |
|---|------------------------|
| ① ON / OFF SWITCH W/RED LED BULB  | ⑪ ONE KEY ONE NOTE     |
| ② SPEAKER   | ⑫ LESSON 2             |
| ③ 5 DRUMS / CYMBAL  | ⑬ LESSON 1             |
| ④ SOUND EFFECT  | ⑭ TEMPO CONTROL        |
| ⑤ BATTERY COMPARTMENT (at rear)   | ⑮ VOLUME CONTROL       |
| ⑥ BLACK & WHITE 37 KEYS<br>(white 22keys have lightup<br>black 15keys have not lightup) | ⑯ 16 INSTRUMENTS       |
| ⑦ STOP  | ⑰ 8 RHYTHM STYLES      |
| ⑧ BEAT MODE   | ⑱ 8 DEMO SONGS         |
| ⑨ KEYLIGHTS<br>(white 22keys with red LED bulbs)  | ⑲ BOOK STAND           |
| ⑩ CHORD ON / OFF  | ⑳ LED BULBS            |
|   | ㉑ FLASH-LIGHT ON / OFF |
|   | ㉒ RECORD / REPLAY KEY  |

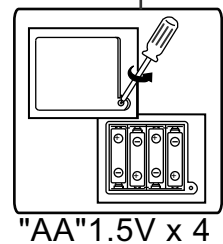

### INSTALLING BATTERIES

INSTALL BATTERIES AS SHOWN  
USES 4 "AA" BATTERIES (INCLUDED)

\* For the keyboard's best performance and longest life, we recommend same type of New Alkaline Batteries \*

Notes : WATCH CAREFULLY THE ⊕ AND ⊖ ENDS OF BATTERIES.

IF YOU DON'T INSTALL BATTERIES CORRECTLY THE KEYBOARD WILL NOT WORK.

REMOVE BATTERIES IF UNIT IS NOT TO BE USED FOR A LONG PERIOD OF TIME (ABOUT 30 DAYS OR MORE)  
TO PREVENT BATTERY LEAKAGE AND POSSIBLE DAMAGE TO THE UNIT.

Follow these steps to install batteries.

1. Use a screwdriver to loosen the screw on the battery compartment cover.
2. Install the batteries in the compartment as indicated by the polarity symbols ( + and - ) as marked inside.
3. Close the cover, then tighten the screw.
4. When the volume weakens or the keyboard stops operating properly, replace the batteries.

#### CAUTIONS :

- \* If you do not plan to use the 37-keys keyboard for 4 or more weeks, remove the batteries.
- \* Dispose of old batteries promptly and properly. Do not burn or bury them.

#### PRECAUTION :

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-zinc), or rechargeable (Nickel-cadmium) batteries.
- Do not use rechargeable batteries.

#### WARNING:

CONTAINS THE GLASS LIGHT BULB WHICH COULD CAUSE AN INJURY IF THE TOY IS BROKEN !

#### OPERATION

1. On / Off : On/Off switch (Auto sleep function : The Keyboard shut-off automatically. If you do not press any key for about 38 seconds. Please press any key to restart.) When power switch On, the keyboard is default setting & LED light up.
2. Speaker : Left and right speakers.
3. 5 Drums / Cymbal : There are 5 different styles button (Bass Drum, Snare Drum, Hihat Cymbal, Cymbal & High Tom) of drums / cymbal. Press any button to hear it.
4. Sound Effect : Press the button to hear Hand Clap sound.
5. Batteries Compartment : See install batteries as shown as above.
6. Black & White Keys : You can create your own melodies on the keyboard. Just play the 37 black and white keys. When pressing the 22 white keys on the keyboard with LED bulb are light.
7. Stop : Exit any mode by pressing the Stop key.
8. Beat Mode : Press the key of sound and lighting system changeable running flash-lights on red top bar. Press Stop key to turn Off this function.
  - \* Beat Mode + Tempo + Instruments + 37 black and white keys to create your own melodies. When select Beat Mode function the 22 white keys without light.
9. Keylights : Pressing the Key Light On/Off function. The 22 white keys on the keyboard with LED bulb are light.
10. Chord : Press CHORD are melodies sound to switch the any to the 8 rhythms. Press once to switch Off single beat & press again to resume. When switch Chord is Off the lighting system changeable running flash-lights on red bar, the Chord is On the lighting system changeable running flash-lights on red bar and 22 white keys. Press Stop key to turn off this function.
11. OKON : Press OKON once to choose first demo song, press again to choose the next song. Meanwhile, the background music start demo sound continuously play the indicated light-up white keys or any black & white keys to until the end of playing and with the lighting system changeable running flash-lights on red bar. Press STOP key to turn off this function.
  - \*OKON + Tempo + Key Light : Press OKON have demo song + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
12. Lesson 2 : Press Lesson 2 once to choose first teaching song, press again to choose the next song. Press the button to hearing on stage by stage to teaching the melodies. Meanwhile 1st stage to hearing and play the indicated lightup, you should follow to press the white keys lightup still end. 2nd stage to continue to hearing and play the indicated lightup, you should follow again and again.
  - \*Lesson 2 + Tempo + Key Light : Press Lesson 2 have teaching song + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
13. Lesson 1 : Press Lesson 1 once to choose first teaching song, press again to choose the next song. Press the button to hearing the background music and play the indicated lightup, you should follow to press the white keys lightup still end.
  - \* Lesson 1 + Tempo + Key Light : Press Lesson 1 have teaching song + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
14. Tempo Control : You can adjust the Tempo of the background rhythm with the two Tempo Buttons. Press Up button to speed up the tempo and press Down button to slow the tempo down.
15. Volume Control : The Volume control has several levels. The keyboard automatically selects the regular levels for each time you turn it on. To adjust the volume repeated press the Up to increase the volume and Down to decrease.
16. 16 Instruments : Press once to choose from the 16 percussion instruments sound key available. You can create your own melodies on the keyboards. Just the black and white keys. (Press white keys with light-up) The keyboard automatically selects the piano sound each time you turn it on. To select a different instrument sound, press the desired sound's button.
  - \* 16 Instruments + 5 Drums / Cymbal : Press once to choose from the 16 instruments sound key available. You can create your own melodies on the keyboard. Just play the black and white keys (Press white keys with light-up) and add any 5 Drums / Cymbal sound in your melodies.
17. 8 Rhythms : Press once to choose the 8 rhythm keys background music available, press again to choose different styles of best and lighting system changeable running flash-lights on red top bar and white keys. You can create your own melodies on the keyboard.
  - \* 8 Rhythms + 5 Drums / Cymbal + Tempo + Key Light : Press once to choose from the 8 rhythm keys background music available. You can create your own melodies on the keyboard. Just play the black and white keys + add any 3 drums sound in your melodies + Adjust the Tempo press Up to speed up or Down to slow + Press Key Light is Off/On the keyboard are 22 white keys. Press Stop key to turn off this function.
18. Demo : Press once to choose first demo song, press again to choose the next song. When start the demo song until the end of music and the lighting system changeable running flash-lights. Press Stop key to turn off this function.
  - \* Demo + Tempo + Key Light : Press the demo song keys + adjust the Tempo press Up to speed up or Down to slow + Press Key Light On/Off for the 22 white keys on the keyboard. Press Stop key to turn off this function.
19. Book Stand : Put down the book stand on the holder and put out to release.
20. LED Bulbs : Sounds are lighting system with changeable running flash-lights.
21. Flash-light ON / OFF : Pressing the Key Light On/Off function. The red top bar with LED bulb are light.
22. Red LED Bulbs : RECORD and REPLAY the LED light up signal is ON
  - Record / Replay : - Press Record when Red LED Bulb light up and produce background music. Just play the black & white keys to create your own tune. (Press white keys with light.)
    - \* Record + 16 Instruments : Press Record when red LED bulb light-up and produce background music and press any 16 inst. sound. Just play the black & white keys to create your own tune. (Press white keys with light.)
      - Press Replay to hear it your record music at about 38 keys and final Instruments sound. Press Replay again will play once each time. The Replay button is pressed until the Red LED bulb light-up. Press Stop key to turn off this function. (Press white key with light-up to record, meanwhile the replay can light up on white keys only. If press black keys to record, when replay cannot lighting on the black keys.)